

EQUIPMENT LIST

MD83 SN 53123 N786TW

March 25, 2011

Note: For Galleys, seats, loose equipment see LOPA and EE DWG.

AIRCRAFT REGISTRATION & SYSTEM BY ATA CHAPTER	PART NUMBER	DESCRIPTION
N786TW -ATA21-20-02-1	179460-8-1:IM6183	WATER SEPARATOR
N786TW -ATA21-20-03-1	320490-1-1:IM1178	WATER SEPARATOR CONTROL VALVE
N786TW -ATA21-20-04-1	319886-21-1:IV59364	SELENOID VALVE
N786TW -ATA21-20-04-2	319886-21-1:IV59364	SELENOID VALVE
N786TW -ATA21-20-06-1	605290-4-2:I2A650	FAN VANE AXIAL MOTOR
N786TW -ATA21-20-06-2	605290-10-1:I06848	VENTILATOR MOTOR
N786TW -ATA21-20-12-1	605457-7:I70210	FAN
N786TW -ATA21-20-14-1	2021136-4:I7X000	ACTUATOR
N786TW -ATA21-31-00-1	SYLZ9885:I05624	CABIN ELECT THERMO SWITCH
N786TW -ATA21-31-00-2	SYLZ9885:I05624	CABIN ELECT THERMO SWITCH
N786TW -ATA21-31-01-1	392714-1-1:I59364	VALVE-PRESURE REGULATOR
N786TW -ATA21-31-01-2	392714-1-1:I59364	VALVE-PRESURE REGULATOR
N786TW -ATA21-31-02-1	396130-1-1:IM6183	FLOW CONTROL VALVE
N786TW -ATA21-31-02-2	396130-1-1:IM6183	FLOW CONTROL VALVE
N786TW -ATA21-31-07-1	AW2835AH01:I4A887	INDICATOR-CABIN ALT & DIFFERENTIALERENTIAL PRES
N786TW -ATA21-31-07-1	SRL92E:I4A887	INDICATOR-AIR CONDITIONING PRES
N786TW -ATA21-31-07-2	SRL92E:I4A887	INDICATOR-AIR CONDITIONING PRES
N786TW -ATA21-31-09-1	45D16-1:I09049	SINGLE-ENG 2ND SEGMENT CLIMB PRESS SW
N786TW -ATA21-31-09-2	45D16-1:I09049	SINGLE-ENG 2ND SEGMENT CLIMB PRESS SW
N786TW -ATA21-31-11-1	392454-3-1:IM6183	PRESSURE DIFFERENTIAL REGULATOR
N786TW -ATA21-31-11-2	392454-3-1:IM6183	PRESSURE DIFFERENTIAL REGULATOR
N786TW -ATA21-32-03-1	2117180-2:IV64547	CABIN PRESS CONTROLLER
N786TW -ATA21-32-03-2	2117180-3:I64547	CABIN PRESS CONTROLLER
N786TW -ATA21-32-05-1	2022014-2:I70210	ELECTRIC MOTOR
N786TW -ATA21-32-05-1	2021974-2:IV70210	ACTUATOR VALVE
N786TW -ATA21-32-05-1	5653731-501:I81205	NOZZLES OUT FLOW VALVE
N786TW -ATA21-32-06-1	WL503RC1:IK5294	INDICATOR RATE OF CLIMB
N786TW -ATA21-32-10-1	130476-4:IV64547	CABIN PRESS.SELECTOR
N786TW -ATA21-51-01-1	204950-5-5:I70210	TURBINE COOLING FAN
N786TW -ATA21-51-01-2	204950-5-4:IV70210	AIR CYCLE MACHINE
N786TW -ATA21-51-01-3	926290-7-5:I55284	REFRIGERATION UNIT
N786TW -ATA21-51-02-1	926290-7-5:I55284	REFRIGERATION UNIT
N786TW -ATA21-51-02-2	979680-1-1:I70210	VALVE-TEMP CONTROL
N786TW -ATA21-51-02-2	979680-1-1:I70210	VALVE-TEMP CONTROL
N786TW -ATA21-51-03-1	194110-1:I27914	HEAT EXCHANGER - PRIMARY
N786TW -ATA21-51-03-2	184060-3-2:IM1178	HEAT EXCHANGER- SECONDARY
N786TW -ATA21-51-04-1	194110-1:I27914	HEAT EXCHANGER - PRIMARY
N786TW -ATA21-51-05-2	184060-3-2:IM1178	HEAT EXCHANGER- SECONDARY
N786TW -ATA21-51-06-1	397364-3-1:IM1690	BUTTERFLY VALVE
N786TW -ATA21-51-06-2	397364-3-1:IM1690	BUTTERFLY VALVE
N786TW -ATA21-52-03-1	75D30-1:IPENDIENT	DIFFERENTIAL PRESS.SWITCH
N786TW -ATA21-60-00-1	607146-2-1:IM6489	CABIN TEMPERATURE CONTROL
N786TW -ATA21-60-00-2	607146-2-2:IM6489	CABIN TEMPERATURE CONTROL
N786TW -ATA21-61-01-1	321858-3-1:IM6489	BUTTERFLY VALVE
N786TW -ATA21-61-01-3	SRL92G:IPENDIENT	INDICATOR-AIR CONDITIONING CONTROL
N786TW -ATA21-61-01-4	SRL92G:IPENDIENT	INDICATOR-AIR CONDITIONING CONTROL
N786TW -ATA21-61-06-1	129738-1:IV59364	TERMOSTATIC SYSTEM PNEUMATIC

N786TW -ATA21-62-01-1	162BL708:I35918	INDICATOR-CABIN TEMPERATURE
N786TW -ATA22-01-01-1	4034241-971:I58960	COMPUTER DIGITAL FLT GUIDANCE
N786TW -ATA22-01-01-2	4034241-972:I58960	COMPUTER DIGITAL FLT GUIDANCE
N786TW -ATA22-01-02-1	4034242-934:I58960	PANEL-FLIGHT GUIDANCE CONTROLLER
N786TW -ATA22-01-03-1	4034233-901:I40228	POSITION SENSOR
N786TW -ATA22-01-03-2	4034233-901:I40228	POSITION SENSOR
N786TW -ATA22-01-05-1	4034235-901:I58960	PANEL- STATUS TEST
N786TW -ATA22-11-01-1	4034237-915:I64547	AILERON SERVO DRIVE UNIT
N786TW -ATA22-11-01-1	4034237-915:I64547	AILERON SERVO DRIVE UNIT
N786TW -ATA22-12-01-1	4034237-915:I64547	AILERON SERVO DRIVE UNIT
N786TW -ATA22-13-01-1	2589445-933:I64547	YAW DAMPER ACTUATOR
N786TW -ATA22-13-02-1	4034237-915:I64547	AILERON SERVO DRIVE UNIT
N786TW -ATA22-17-00-1	4034234-902:I58960	ANNUNCIATOR FLIGHT MODE PANEL
N786TW -ATA22-17-00-2	4034234-902:I58960	ANNUNCIATOR FLIGHT MODE PANEL
N786TW -ATA22-31-01-1	2587781-901:I55284	ELECTRIC MECHANIC ROTATORY THROTTLE
N786TW -ATA23-10-01-1	622-3371-001:I4V792	TRANSCEIVER HF MODE
N786TW -ATA23-10-01-1	622-3856-001:IM1426	ADAPTOR
N786TW -ATA23-10-04-1	622-4784-001:I4V792	CONTROL - ANTENA COUPLER
N786TW -ATA23-10-05-1	622-9261-001:I4V792	ACCESSORY UNIT-COUPLER
N786TW -ATA23-10-06-1	787-6248-001:I90107	HF ARRESTOR
N786TW -ATA23-20-01-1	622-1396-206:IM1426	TRANSMITTER VHF
N786TW -ATA23-20-01-2	622-1396-206:IM1426	VHF COMM TRANSCEIVER
N786TW -ATA23-20-02-1	G5584-02:IPENDIENT	VHF COMM CONTROL PANEL
N786TW -ATA23-20-02-2	G5584-02:IPENDIENT	VHF COMM CONTROL PANEL
N786TW -ATA23-21-01-1	N1335B:IV8F390	SELCAL DECODER
N786TW -ATA23-21-02-1	G5686:I99837	SELCAL CONTROL PANEL
N786TW -ATA23-30-01-1	622-4487-001:I13499	P.A. AMPLIFIER
N786TW -ATA23-30-02-1	686-3000-003:I78711	ELECTRONIC SWITCHING UNIT
N786TW -ATA23-30-04-1	G6107A:I81205	AMPLIFIER BOX
N786TW -ATA23-40-04-1	63274-008:IPENDIENT	HANDSET
N786TW -ATA23-40-04-2	686-2000-001:I78711	CRADLE ASSEMBLY
N786TW -ATA23-40-04-3	686-2000-001:I78711	CRADLE-CHASSIS INTERCOMM
N786TW -ATA23-40-04-4	686-2000-001:I78711	CRADLE ASSEMBLY
N786TW -ATA23-40-04-5	686-1000-002:I88277	HANDSET
N786TW -ATA23-40-04-6	686-1000-002:I88277	HANDSET
N786TW -ATA23-50-01-1	G3122B:I99837	FLIGHT INTERPHONE AMPLIFIER
N786TW -ATA23-50-02-1	G6977-03:I99837	AUDIO SELECTOR
N786TW -ATA23-50-02-2	G6977-03:I99837	AUDIO SLECTOR CONTROL PNEL
N786TW -ATA23-50-02-3	G6977-03:I99837	AUDIO SLECTOR CONTROL PNEL
N786TW -ATA23-50-03-1	G-5515:I99837	SPEAKER ASSEMBLY-OVHD COCKPIT
N786TW -ATA23-50-03-2	G-5515:I99837	SPEAKER ASSEMBLY-OVHD COCKPIT
N786TW -ATA23-50-05-1	G5586:I88277	PANEL- AUDIO JACK
N786TW -ATA23-50-05-2	G5586:I88277	PANEL- AUDIO JACK
N786TW -ATA23-70-01-1	S162-0030-00:I06141	CU (WITH INTEGRAL MIC BLACK)
N786TW -ATA23-70-02-1	2100-1020-00:I06141	VOICE RECORDER
N786TW -ATA23-70-02-1	DK120:I46943	ULB BATT CVR/FDR
N786TW -ATA24-10-00-1	162BL403C:I35918	OUTLET TEMPERATURE INDICATOR
N786TW -ATA24-10-00-2	162BL403C:I35918	OUTLET TEMPERATURE INDICATOR
N786TW -ATA24-20-00-1	8AW61LAS1:I4A887	AC LOAD INDICATOR
N786TW -ATA24-20-00-2	8AW61LAS1:I4A887	AC LOAD INDICATOR
N786TW -ATA24-20-00-3	8AW61LAS1:I4A887	AC LOAD INDICATOR
N786TW -ATA24-20-00-4	8AW61LVF1:IM4277	AC VOLTS/AMPS INDICATOR
N786TW -ATA24-20-00-5	570-487:I88277	AC FREQUENCY INDICATOR
N786TW -ATA24-20-06-1	914F567-4:I83843	RELAY-POWER AC
N786TW -ATA24-20-06-2	9008D09-2:IV83843	RELAY-POWER AC
N786TW -ATA24-20-06-3	9008D09-3:I99167	RELAY-POWER AC

N786TW -ATA24-20-06-4	914F567-4:I83843	RELAY-POWER AC
N786TW -ATA24-20-06-5	9008D09-3:I99167	RELAY-POWER AC
N786TW -ATA24-20-06-6	9008D09-2:IV83843	RELAY- AC EXT PWR LH
N786TW -ATA24-20-06-7	9008D09-3:I99167	RELAY-POWER AC
N786TW -ATA24-20-07-1	947F945-3:I05277	GENERATOR CONTROL
N786TW -ATA24-20-07-2	947F945-3:I05277	GENERATOR CONTROL
N786TW -ATA24-20-08-1	947F946-3:I05277	AC BUS CONTROL PANEL
N786TW -ATA24-23-01-1	ASH734-1:I07639	STATIC INVERTER
N786TW -ATA24-30-00-1	522270:I4A887	DC LOAD INDICATOR
N786TW -ATA24-30-00-1	8DW84LBA1:IM4277	DC VOLTS/AMPS INDICATOR
N786TW -ATA24-30-00-2	522270:I4A887	DC LOAD INDICATOR
N786TW -ATA24-30-00-3	6RW176YN3:I05326	TRANSFORMER RECTIFIER
N786TW -ATA24-30-00-4	6RW176YN3:I05326	TRANSFORMER RECTIFIER
N786TW -ATA24-30-00-5	6RW176YN3:I05326	TRANSFORMER RECTIFIER
N786TW -ATA24-30-00-6	6RW176YN3:I05326	TRANSFORMER RECTIFIER
N786TW -ATA24-30-01-1	30475-002:IPENDIENT	BATTERY NICKEL CADMIUM
N786TW -ATA24-30-01-2	30475-002:IPENDIENT	BATTERY NICKEL CADMIUM
N786TW -ATA24-30-02-1	203BC102-1:I31467	BATTERY NI-CAD CHARGER
N786TW -ATA24-41-05-1	B-188MA-1:I55284	MONITOR UNIT, EXTERNAL PO
N786TW -ATA25-13-01-1	3A071-0005-16-3:IM5213	SEAT - CAPTAIN'S
N786TW -ATA25-13-01-2	3A071-0006-16-3:IPENDIENT	SEAT- FIRST OFFICER'S
N786TW -ATA25-20-01-1	9000A	WHEEL CHAIR
N786TW -ATA25-30-00-1	416-0001-9:I0BYW8	COFFEE MAKER
N786TW -ATA25-30-00-1	4510-22UF-00:I16827	COFFEE MAKER
N786TW -ATA25-30-00-1	416-0001-9:I0BYW8	COFFEE MAKER
N786TW -ATA25-30-00-2	8103-06-0000:IPENDIENT	OVEN
N786TW -ATA25-30-00-2	8001-07-4000:IPENDIENT	BOX ASSEMBLY CONTROL
N786TW -ATA25-30-00-2	67251-1:IU3384	OVEN
N786TW -ATA25-30-00-2	8001-07-0000:ID2249	OVEN ASSEMBLY
N786TW -ATA25-30-00-2	8201-01-0000:ID2249	OVEN ASSEMBLY
N786TW -ATA25-30-00-2	8201-01-0000:ID2249	OVEN ASSEMBLY
N786TW -ATA25-60-00-1	A12SA:I98905	MEGAPHONE
N786TW -ATA25-60-00-1	A12SA:I98905	MEGAPHONE
N786TW -ATA25-60-00-1	A12SA.:IPENDIENT	MEGAPHONE
N786TW -ATA25-60-00-2	802300-14:I53655	PROTECTOR RESPIRATOR
N786TW -ATA25-60-00-2	802300-14:I53655	PROTECTIVE BREATHING
N786TW -ATA25-60-00-2	802300-14:I53655	PROTECTIVE BREATHING
N786TW -ATA25-60-01-1	2004FAA	ENHANCED EMERGENCY MEDICAL KIT
N786TW -ATA25-60-02-1	5501	AUTOMATIC EXTERNAL DEFIBRILLATOR
N786TW -ATA25-62-00-1	D37013-121:IM3176	RESERVOIR AND VALVE ASSEMBLY
N786TW -ATA25-62-00-1	D29982-107:I88277	ESCAPE SLIDE
N786TW -ATA25-62-00-2	D37013-121:IM3176	RESERVOIR AND VALVE ASSEMBLY
N786TW -ATA25-62-00-2	D37013-121:IM3176	RESERVOIR AND VALVE ASSEMBLY
N786TW -ATA25-62-00-2	D29982-107:I88277	FWD ESCAPE SLIDE
N786TW -ATA25-62-00-3	D29985-107:IM5747	ESCAPE SLIDE
N786TW -ATA25-62-00-3	D37013-111:I97153	RESERVOIR AND VALVE ASSEMBLY
N786TW -ATA25-62-01-1	D29984-109:IM3176	ESCAPE SLIDE (TAIL)
N786TW -ATA25-62-01-1	D37013-117:IM3176	RESERVOIR AND VALVE ASSEMBLY
N786TW -ATA25-62-02-1	R0032-12:I62983	CYLINDER VALVE ASSEMBLY
N786TW -ATA25-62-02-1	R0032-12:I62983	CYLINDER VALVE ASSEMBLY
N786TW -ATA25-62-02-1	R0202A201:IPENDIENT	LIFE RAFT (46 PERSON)
N786TW -ATA25-62-02-2	R0032-12:I62983	CYLINDER VALVE ASSEMBLY
N786TW -ATA25-62-02-2	R0032-12:I62983	CYLINDER VALVE ASSEMBLY
N786TW -ATA25-62-02-2	R0202A201:IPENDIENT	LIFE RAFT (46 PERSON)
N786TW -ATA25-62-02-3	R0032-12:I62983	CYLINDER VALVE ASSEMBLY
N786TW -ATA25-62-02-3	R0032-12:I62983	CYLINDER VALVE ASSEMBLY

N786TW -ATA25-62-02-3	R0202A201:IPENDIENT	LIFE RAFT (46 PERSON)
N786TW -ATA25-62-02-4	R0032-12:I62983	CYLINDER VALVE ASSEMBLY
N786TW -ATA25-62-02-4	R0032-12:I62983	CYLINDER VALVE ASSEMBLY
N786TW -ATA25-62-02-4	R0202A201:IPENDIENT	LIFE RAFT (46 PERSON)
N786TW -ATA25-64-00-1	750056:I55635	EMERGENCY LOCATOR TRANSMITTER
N786TW -ATA25-64-00-2	453-0421:I60253	EMERGENCY LOCATOR TRANSMITTER
N786TW -ATA25-64-00-2	01N65910:IS0131	EMERGENCY LOCATOR TRANSMITTER
N786TW -ATA26-10-03-1	892809-0400-02:I76712	FIRE DETECTION CONTROL
N786TW -ATA26-10-03-2	892809-0400-02:I76712	FIRE DETECTION CONTROL
N786TW -ATA26-10-03-3	892809-0400-02:I76712	FIRE DETECTION CONTROL
N786TW -ATA26-20-01-1	898150:IM4259	EXTINGUISHER
N786TW -ATA26-20-01-2	898150:IM4259	EXTINGUISHER
N786TW -ATA26-20-03-1	876296-2:I81205	CARTRIDGE EXPLOSIVE FIRE EXTINGUISHER
N786TW -ATA26-20-03-2	876296-2:I81205	CARTRIDGE EXPLOSIVE FIRE EXTINGUISHER
N786TW -ATA26-20-03-3	M876296-3:I81205	CARTRIDGE EXPLOSIVE FIRE EXTINGUISHER
N786TW -ATA26-20-03-4	M876296-3:I81205	CARTRIDGE EXPLOSIVE FIRE EXTINGUISHER
N786TW -ATA26-20-03-5	M876296-3:I81205	CARTRIDGE EXPLOSIVE FIRE EXTINGUISHER
N786TW -ATA26-20-03-6	M876296-3:I81205	CARTRIDGE EXPLOSIVE FIRE EXTINGUISHER
N786TW -ATA26-20-05-3	898052:I33525	HALON FIRE EXTINGUISHER
N786TW -ATA26-20-05-3	898052:I33525	HALON FIRE EXTINGUISHER
N786TW -ATA26-20-05-3	898052:I33525	HALON FIRE EXTINGUISHER
N786TW -ATA26-20-05-4	898052:I33525	HALON FIRE EXTINGUISHER
N786TW -ATA26-22-01-1	TFC14-0039-1:I21844	CARGO FIRE EXTINGUISHER BOTTLE
N786TW -ATA26-22-01-1	30903852:I05167	FIRE EXTINGUISHER BOTTLE CARTRIDGE
N786TW -ATA26-22-01-2	TFC14-0045-1:I21844	CARGO FIRE EXTINGUISHER BOTTLE
N786TW -ATA26-22-01-2	30903852:I05167	FIRE EXTINGUISHER BOTTLE CARTRIDGE
N786TW -ATA26-22-03-1	TFC16-0026-1:IM6079	CARGO FIRE EXTINGUISHER SYSTEM METERING VALVE
N786TW -ATA26-22-04-1	TFC16-0028-1:IM6079	CARGO FIRE EXTINGUISHER SYSTEM DIVERTER VALVE
N786TW -ATA27-10-00-1	4034233-901:I40228	POSITION SENSOR
N786TW -ATA27-10-04-2	5918125-501:I88277	DAMPER ASSEMBLY AILERON
N786TW -ATA27-20-02-1	5955545-503:I0LTU8	TAB ASSEMBLY-RUDDER
N786TW -ATA27-20-08-1	5936919-5001:I88277	MANIFOLD
N786TW -ATA27-20-15-1	3952531-5001:I88277	CYLINDER
N786TW -ATA27-30-07-1	3918165-5501:I88277	VALVE-HYDRAULIC
N786TW -ATA27-30-08-1	5934212-5501:I81205	CYLINDER
N786TW -ATA27-40-01-2	D1775-1:I17472	MOTOR-AC 115/200V
N786TW -ATA27-40-03-1	9207-10296:I58657	RELAY STAB TRIM LONG
N786TW -ATA27-40-03-2	9207-10296:I58657	PRIMARY LONGITUDINAL TRIM RELAY
N786TW -ATA27-40-09-1	561349:I66503	SWITCH
N786TW -ATA27-40-10-1	9590-6:I99167	STAB TRIM MOTOR
N786TW -ATA27-52-02-1	5937052-5001:I88277	FLAP ACTUATOR CYLINDER
N786TW -ATA27-52-02-2	5937052-5001:I88277	FLAP ACTUATOR CYLINDER
N786TW -ATA27-52-02-3	5937052-5001:I88277	FLAP ACTUATOR CYLINDER
N786TW -ATA27-52-02-4	5937052-5001:I88277	FLAP ACTUATOR CYLINDER
N786TW -ATA27-52-02-5	5937052-5001:I88277	FLAP ACTUATOR CYLINDER
N786TW -ATA27-52-02-6	5937052-5001:I88277	FLAP ACTUATOR CYLINDER
N786TW -ATA27-52-02-7	5937052-5001:I88277	FLAP ACTUATOR CYLINDER
N786TW -ATA27-52-02-8	5937052-5001:I88277	FLAP ACTUATOR CYLINDER
N786TW -ATA27-54-01-1	ST12BH:I4A887	FLAP POSITION TRANSMITTER
N786TW -ATA27-54-01-2	ST12BH:I4A887	FLAP POSITION TRANSMITTER
N786TW -ATA27-62-04-1	5936971-5503:I88277	VALVE ASSEMBLY
N786TW -ATA27-62-04-1	5936971-5503:I88277	VALVE ASSEMBLY
N786TW -ATA27-62-05-1	1040T100-5:I98889	AUTO SPOILER ACTUATOR
N786TW -ATA27-62-05-2	147425-3:I79318	VALVE BYPASS
N786TW -ATA27-62-06-1	40-62575:I81982	TRANSDUCER WHEEL SPEED
N786TW -ATA27-62-07-1	42-091-3:I81982	SPOILER CONTROL

N786TW -ATA27-80-01-1	5937563-501:188277	SLAT ASSEMBLY-OUTBOARD WING
N786TW -ATA27-80-01-2	5937415-510:181205	RH SLAT NO. 0
N786TW -ATA27-80-01-3	5937407-1:181205	TRACK-NO. 8 IDLER
N786TW -ATA27-80-01-3	5937407-1:181205	TRACK-NO. 8 IDLER
N786TW -ATA27-80-01-3	5937409-1:188277	TRACK-NO.10 IDLER
N786TW -ATA27-80-01-3	5937409-1:188277	TRACK-NO.10 IDLER
N786TW -ATA27-80-01-3	5937412-1:181205	TRACK-NO.13 DRIVE
N786TW -ATA27-80-01-3	5937412-1:181205	TRACK-NO.13 DRIVE
N786TW -ATA27-80-01-3	5937411-1:181205	TRACK-NO.12 IDLER
N786TW -ATA27-80-01-3	5937411-1:181205	TRACK-NO.12 IDLER
N786TW -ATA27-80-01-3	5937414-1:181205	TRACK-NO.15 IDLER
N786TW -ATA27-80-01-3	5937414-1:181205	TRACK-NO.15 IDLER
N786TW -ATA27-80-01-3	5937408-503:181205	TRACK
N786TW -ATA27-80-01-3	5937408-503:181205	TRACK
N786TW -ATA27-80-01-3	5937405-1:181205	TRACK-No.6 IDLER
N786TW -ATA27-80-01-3	5937405-1:181205	TRACK-No.6 IDLER
N786TW -ATA27-80-01-3	5937402-1:181205	TRACK-No.3 IDLER
N786TW -ATA27-80-01-3	5937402-1:181205	TRACK-No.3 IDLER
N786TW -ATA27-80-01-3	5937404-1:181205	TRACK-No.5 IDLER
N786TW -ATA27-80-01-3	5937410-1:181205	TRACK-No.11 DRIVE
N786TW -ATA27-80-01-3	5937410-1:181205	TRACK-No.11 DRIVE
N786TW -ATA27-80-01-3	5937406-501:181205	TRACK-No.7 DRIVE
N786TW -ATA27-80-01-3	5937413-1:181205	TRACK-No.14 DRIVE
N786TW -ATA27-80-01-3	5937413-1:181205	TRACK-No.14 DRIVE
N786TW -ATA27-80-01-3	5937401-1:181205	TRACK-No.2 DRIVE
N786TW -ATA27-80-01-3	5937400-1:181205	TRACK-No.1 IDLER
N786TW -ATA27-80-01-3	5937400-1:181205	TRACK-No.1 IDLER
N786TW -ATA27-80-07-1	4952287-503:181205	SWITCH - RAIN
N786TW -ATA27-80-08-1	6010N0001-04:117472	ACTUATOR-ELECTRIC-MECHANICAL AUTO SLAT
N786TW -ATA28-20-01-1	60007-1:IPENDIENT	REFUEL OVER PRESS REGULATOR
N786TW -ATA28-20-02-1	AV16B1736D:I73760	VALVE-FUEL SHUT OFF
N786TW -ATA28-20-02-3	AV16B1736D:I73760	VALVE-FUEL SHUT OFF
N786TW -ATA28-20-06-1	212200:I96124	VALVE CHECK
N786TW -ATA28-20-07-1	398000-1:IV68037	FUEL BOOSTER PUMP
N786TW -ATA28-20-07-2	398000-1:IV68037	FUEL BOOSTER PUMP
N786TW -ATA28-40-01-1	020-070-002:I26055	TANK UNIT FUEL QTY
N786TW -ATA28-40-01-1	020-070-003:I92003	TANK UNIT FUEL QTY
N786TW -ATA28-40-01-1	020-070-005:I92003	TANK UNIT FUEL QTY
N786TW -ATA28-40-01-1	020-070-006:I92003	TANK UNIT FUEL QTY
N786TW -ATA28-40-01-1	020-070-007:I92003	TANK UNIT FUEL QTY
N786TW -ATA28-40-01-1	020-070-109:I26055	TANK UNIT FUEL QTY
N786TW -ATA28-40-01-1	020-070-012:I92003	TANK UNIT FUEL QTY
N786TW -ATA28-40-01-1	020-070-012:I92003	TANK UNIT FUEL QTY
N786TW -ATA28-40-01-1	020-070-010:I26055	UNIT FUEL TANK
N786TW -ATA28-40-01-1	020-070-004:I26055	UNIT FUEL TANK
N786TW -ATA28-40-01-1	020-070-006:I92003	TANK UNIT FUEL QTY
N786TW -ATA28-40-01-1	020-070-008:I26055	TANK UNIT FUEL QTY
N786TW -ATA28-40-01-1	020-070-003:I92003	TANK UNIT FUEL QTY
N786TW -ATA28-40-01-1	020-070-109:I26055	TANK UNIT FUEL QTY
N786TW -ATA28-40-01-1	020-070-011:I26055	TANK UNIT FUEL QTY
N786TW -ATA28-40-01-1	020-070-010:I26055	TANK UNIT FUEL QTY
N786TW -ATA28-40-01-1	020-070-007:I92003	TANK UNIT FUEL QTY
N786TW -ATA28-40-01-1	020-070-001:I92003	TANK UNIT FUEL QTY
N786TW -ATA28-40-01-1	020-070-005:I92003	TANK UNIT FUEL QTY
N786TW -ATA28-40-01-1	020-070-008:I26055	UNIT FUEL TANK
N786TW -ATA28-40-01-1	020-070-011:I26055	UNIT FUEL TANK

N786TW -ATA28-40-03-1	050-014-003:I26055	FUEL PROBE
N786TW -ATA28-40-03-1	050-014-002:I26055	FUEL COMPENSATOR
N786TW -ATA28-40-03-1	050-014-001:I26055	UNIT FUEL TANK COMPENSATOR
N786TW -ATA28-40-04-1	003-005-001:I92003	JUNCTION PROBE
N786TW -ATA28-40-04-1	003-005-001:I92003	JUNCTION PROBE
N786TW -ATA28-40-04-1	003-005-002:I92003	JUNCTION PROBE
N786TW -ATA28-40-05-1	367-010-005:ID0079	STANDARD ELECTRONIC MODULE
N786TW -ATA28-40-07-1	372-001-001:I26055	INDICATOR - TOTAL FUEL QTY
N786TW -ATA28-40-07-2	372-035-001:I92003	FUEL QUANTITY INDICATOR
N786TW -ATA28-40-08-1	366-006-005:I26055	FUEL REFUELING UNIT
N786TW -ATA29-10-01-1	5936986-5501:I88277	RESERVOIR ASSEMBLY
N786TW -ATA29-10-01-2	5936986-5501:I88277	RESERVOIR ASSEMBLY
N786TW -ATA29-10-04-1	147465:IM5698	FIRE SHUT-OFF VALVE
N786TW -ATA29-10-04-2	147465:IM5698	FIRE SHUT-OFF VALVE
N786TW -ATA29-10-06-1	861555:I62983	AUXILIARY HYD. PUMP
N786TW -ATA29-10-07-1	4100310-6:IM6489	POWER TRANSFER UNIT PTU
N786TW -ATA29-10-08-1	240695-2:I79318	VALVE
N786TW -ATA29-10-10-1	316525:I0HM29	HYDRAULIC HAND PUMP AFT STAIRS
N786TW -ATA29-10-10-2	316525:I0HM29	HYDRAULIC HAND PUMP AFT STAIRS
N786TW -ATA29-10-14-1	AC7031H8K1:I18350	HOUSING-HYDRAULIC FILTER
N786TW -ATA29-30-01-1	ST12AE:I61349	TRANSMITTER HYDRAULIC POSITION
N786TW -ATA29-30-01-2	ST12AE:I61349	TRANSMITTER HYDRAULIC POSITION
N786TW -ATA29-30-02-1	ST107Q:I4A887	HYDRAULIC PRESSURE TRANSMITTER
N786TW -ATA29-30-02-2	ST107Q:I4A887	HYDRAULIC PRESSURE TRANSMITTER
N786TW -ATA30-10-01-1	392444-2-1:I2A650	PRESSURE REGULATOR VALVE
N786TW -ATA30-10-02-1	122944-1-1:I59364	VALVE BUTTERFLY
N786TW -ATA30-10-03-1	105984-2:IV59364	ANTI-ICE SHUT-OFF VALVE
N786TW -ATA30-30-00-1	8DW84LAN1:I97424	HEATER CURRENT INDICATOR
N786TW -ATA30-41-00-1	617-1:I21562	WINDSHIELD TEMP CONTROL
N786TW -ATA30-41-00-2	617-1:I21562	WINDSHIELD TEMP CONTROL
N786TW -ATA30-41-00-3	617-1:I21562	WINDSHIELD TEMP CONTROL
N786TW -ATA30-41-01-1	2312M35-2:I04274	CONVERTER
N786TW -ATA30-42-01-1	2311M84-1:IOGAT1	ELECTRIC MOTOR
N786TW -ATA30-42-01-2	5912396-5:I04274	WINDSHIED WIPER MOTOR
N786TW -ATA30-42-01-2	5912396-6:I81205	WINDSHIED WIPER MOTOR
N786TW -ATA30-42-01-2	XW21090:I04274	ELECTRIC MOTOR
N786TW -ATA30-42-03-1	2144:IV26101	VALVE - RAIN REPELLANT
N786TW -ATA30-42-03-2	2144:IV26101	VALVE - RAIN REPELLANT
N786TW -ATA31-11-01-1	301EDP1-4:I10552	INDICATOR- PRIMARY ENGINE DISPLAY
N786TW -ATA31-12-02-1	103-2200:I81579	INTERRUPTOR
N786TW -ATA31-21-00-1	2600-05-1:I52013	CLOCK
N786TW -ATA31-21-00-2	2600-05-1:I52013	CLOCK
N786TW -ATA31-31-01-1	2100-4043-00:I06141	DATA RECORDER
N786TW -ATA31-31-01-1	DK120:I46943	ULB BATT CVR/FDR
N786TW -ATA31-31-02-1	ED742951-9:I98571	FLT DATA ACQUISITION UNIT
N786TW -ATA31-31-03-1	773770-1:I98571	PANEL- FLIGHT DATA ENTRY
N786TW -ATA31-31-04-1	971-4193-001:I97896	FLT RECORDER ACCELEROMETER
N786TW -ATA31-31-05-1	960-0511-011:IPENDIENT	UNIT MANAGEMENT CONTROL AIDS
N786TW -ATA31-35-01-1	QAR200-0300:I06141	MICRO QAR 512MB BI-PHASE
N786TW -ATA31-61-01-1	201EDP1-1:IK5294	INDICATOR- SYSTEM & SURFACE POS
N786TW -ATA32-11-00L	5935349-503:I88277	MLG UPPER LOCK LINK
N786TW -ATA32-11-00L	5935848-501:IPENDIENT	MLG FIXED SIDE LINK ASSEMBLY
N786TW -ATA32-11-00L	5935346-503:IPENDIENT	MLG UPPER BRACE LINK ASSEMBLY
N786TW -ATA32-11-00L	5935347-517:I81205	MLG PISTON ASSEMBLY
N786TW -ATA32-11-00L	SR09320057-7005:I88277	MLG HYDRAULIC DAMPER
N786TW -ATA32-11-00L	5930999-5503:I71165	MAIN LANDING GEAR ASSEMBLY LH

N786TW -ATA32-11-00L	5935348-501:IPENDIENT	MLG CYLINDICATORER ASSEMBLY
N786TW -ATA32-11-00L	5935351-501:IPENDIENT	MLG LOWER BRACE LINK ASSEMBLY
N786TW -ATA32-11-00L	5937032-1:IPENDIENT	MLG BRACKET ASSEMBLY BUNGEE
N786TW -ATA32-11-00L	5935374-1:I88277	MLG UPPER TORQUE LINK
N786TW -ATA32-11-00L	5935353-1:I88277	MLG LOWER TORQUE LINK
N786TW -ATA32-11-00L	5935350-501:I12511	MLG LOWER LOCK LINK
N786TW -ATA32-11-00L	3937007-501:IPENDIENT	MLG UPPER SIDE BRACE BOLT
N786TW -ATA32-11-00L	3937067-1:IPENDIENT	MLG LOWER SIDE BRACE PIN
N786TW -ATA32-11-00R	5937032-1:IPENDIENT	MLG BRACKET ASSEMBLY BUNGEE
N786TW -ATA32-11-00R	SR09320057-7005:I88277	MLG HYDRAULIC DAMPER
N786TW -ATA32-11-00R	5935349-503:I88277	MLG UPPER LOCK LINK
N786TW -ATA32-11-00R	5935848-501:IPENDIENT	MLG FIXED SIDE LINK ASSEMBLY
N786TW -ATA32-11-00R	5935351-501:IPENDIENT	MLG LOWER BRACE LINK ASSEMBLY
N786TW -ATA32-11-00R	5935346-503:IPENDIENT	MLG UPPER BRACE LINK ASSEMBLY
N786TW -ATA32-11-00R	5935347-517:I81205	MLG PISTON ASSEMBLY
N786TW -ATA32-11-00R	5930999-5504:I71165	MAIN LANDING GEAR ASSEMBLY RH
N786TW -ATA32-11-00R	5935348-501:IPENDIENT	MLG CYLINDER ASSEMBLY
N786TW -ATA32-11-00R	5935374-1:I88277	MLG UPPER TORQUE LINK
N786TW -ATA32-11-00R	5935353-1:I88277	MLG LOWER TORQUE LINK
N786TW -ATA32-11-00R	5935350-501:I12511	MLG LOWER LOCK LINK
N786TW -ATA32-11-00R	3937007-501:IPENDIENT	MLG UPPER SIDE BRACE BOLT
N786TW -ATA32-11-00R	3937067-1:IPENDIENT	MLG LOWER SIDE BRACE PIN
N786TW -ATA32-12-01-2	5930583-290:I88277	DOOR RH
N786TW -ATA32-21-01	5940337-5003:I9K006	NOSE LANDING GEAR ASSEMBLY
N786TW -ATA32-21-01	5920603-507:I88277	NLG PISTON ASSEMBLY
N786TW -ATA32-21-01	5920602-509:IM4994	NLG CYLINDICATORER ASSEMBLY
N786TW -ATA32-21-01	5958412-511:I81205	NLG UPPER ARM ASSEMBLY
N786TW -ATA32-21-01	5958412-513:I81205	NLG LOWER ARM ASSEMBLY
N786TW -ATA32-21-01	3914464-503VF:I81205	NLG UPPER LOCK LINK
N786TW -ATA32-21-01	3913968-513:I88277	NLG LOWER LOCK LINK
N786TW -ATA32-21-03-1	3920208-517:IM0168	LINK ASSEMBLY UPPER DRAG
N786TW -ATA32-21-04-1	3956785-1:I88277	ACTUATOR CYLINDER
N786TW -ATA32-21-04-2	3956785-1:I88277	ACTUATOR CYLINDER
N786TW -ATA32-22-01-2	5914984-510:I81205	LANDING GEAR - NOSE
N786TW -ATA32-32-02-1	5937036-5501:I88277	CYLINDER - MLG RETRACTING
N786TW -ATA32-32-02-2	5937036-5501:I88277	CYLINDER - MLG RETRACTING
N786TW -ATA32-32-03-1	3937033-5501:IPENDIENT	MLG BUNGEE CYLINDER
N786TW -ATA32-32-03-2	3937033-5501:IPENDIENT	MLG BUNGEE CYLINDER
N786TW -ATA32-32-04-1	5939074-5501:I88277	CYLINDER - MLG DOOR ACTUATOR
N786TW -ATA32-32-04-2	5939074-5501:I88277	CYLINDER - MLG DOOR ACTUATOR
N786TW -ATA32-32-06-1	3928137-5001:I88277	ACTUATOR CYLINDER SHOCK STRUT
N786TW -ATA32-32-07-1	5951639-5001:I88277	DOWN LOCK CYLINDER
N786TW -ATA32-32-08-1	3915180-5503:I88277	SWIVEL GLAND VALVE
N786TW -ATA32-32-08-1	3915180-5503:I88277	SWIVEL GLAND VALVE
N786TW -ATA32-32-08-1	3915180-5503:I88277	SWIVEL GLAND VALVE
N786TW -ATA32-32-08-2	3915180-5503:I88277	SWIVEL GLAND VALVE
N786TW -ATA32-32-08-2	3915180-5503:I88277	SWIVEL GLAND VALVE
N786TW -ATA32-32-08-2	3915180-5503:I88277	SWIVEL GLAND VALVE
N786TW -ATA32-32-08-2	3915180-5503:I88277	SWIVEL GLAND VALVE
N786TW -ATA32-40-01-1	5007897-3:I0B9R9	MAIN WHEEL H 44.5X16.5-20
N786TW -ATA32-40-01-2	5007897-3:I0B9R9	MAIN WHEEL H 44.5X16.5-20
N786TW -ATA32-40-01-3	5007897-3:I0B9R9	MAIN WHEEL H 44.5X16.5-20
N786TW -ATA32-40-01-4	5007897-3:I0B9R9	MAIN WHEEL H 44.5X16.5-20
N786TW -ATA32-40-02-1	9550267-7:IPENDIENT	NOSE WHEEL 26 X 6.6
N786TW -ATA32-40-02-2	9550267-6:IM1048	NOSE WHEEL 26 X 6.6
N786TW -ATA32-42-01-1	5007898-3:IK1037	BRAKE ASSEMBLY

N786TW -ATA32-42-01-2	5007898-3:IK1037	BRAKE ASSEMBLY
N786TW -ATA32-42-01-3	5007898-3:IK1037	BRAKE ASSEMBLY
N786TW -ATA32-42-01-4	5007898-3:IK1037	BRAKE ASSEMBLY
N786TW -ATA32-42-02-2	28470-3:I19156	BRAKE CONTROL VALVE
N786TW -ATA32-42-04-1	3311586-1:I94697	AIR ACUUMULATOR HYDRAULIC SYSTEM
N786TW -ATA32-42-04-1	3311586-3:I94697	AIR ACUUMULATOR HYDRAULIC SYSTEM
N786TW -ATA32-42-04-1	3311586-1:I94697	AIR ACUUMULATOR HYDRAULIC SYSTEM
N786TW -ATA32-42-04-2	3311586-1:I94697	AIR ACUUMULATOR HYDRAULIC SYSTEM
N786TW -ATA32-42-04-2	3311586-1:I94697	AIR ACUUMULATOR HYDRAULIC SYSTEM
N786TW -ATA32-42-04-3	3915878-5501:I88277	MANIFOLD-HYDRAULIC
N786TW -ATA32-42-05-1	ST107Q:I4A887	HYDRAULIC PRESSURE TRANSMITTER
N786TW -ATA32-42-05-1	IBA103G93:I4A887	TRANSDUCER
N786TW -ATA32-42-05-2	ST107Q:I4A887	HYDRAULIC PRESSURE TRANSMITTER
N786TW -ATA32-42-05-3	215-009-001:IM5698	INDICATOR - BRAKE HYDRAULIC PRES
N786TW -ATA32-42-07-1	6002089-1:IM3114	BRAKE TEMPERATURE INDICATOR
N786TW -ATA32-43-02-1	40-62575:I81982	TRANSDUCER - WHEEL
N786TW -ATA32-43-02-2	40-62575:I81982	TRANSDUCER - WHEEL
N786TW -ATA32-43-02-3	40-62575:I81982	TRANSDUCER - WHEEL
N786TW -ATA32-43-02-4	40-62575:I81982	TRANSDUCER - WHEEL
N786TW -ATA32-43-03-1	39-249-2:I81982	ANTISKID SYSTEM-DUAL PRESS-CONTROL VALVE
N786TW -ATA32-43-03-2	39-249-2:I81982	ANTISKID SYSTEM-DUAL PRESS-CONTROL VALVE
N786TW -ATA32-43-03-3	39-249-2:I81982	ANTISKID SYSTEM-DUAL PRESS-CONTROL VALVE
N786TW -ATA32-43-03-4	39-249-2:I81982	ANTISKID SYSTEM-DUAL PRESS-CONTROL VALVE
N786TW -ATA32-52-02-1	3934689-5501:IPENDIENT	CYLINDER - NLG STEERING ACTUATOR
N786TW -ATA32-52-02-2	3934689-5001:I88277	CYLINDER - NLG STEERING ACTUATOR
N786TW -ATA33-11-01-1	100-601702-002:I90073	FMS CONTROL PANEL
N786TW -ATA33-11-02-3	5956888-511:IM4069	INSTRUMENT PANEL LIGHT CONTROL
N786TW -ATA33-12-01-1	102ADP1-4:IK5294	OVERHEAD ANNUNCIATOR PANEL
N786TW -ATA33-41-02-1	45-0057-1:I17744	RETRACTABLE LANDING LIGHT
N786TW -ATA33-41-02-2	45-0057-1:I17744	RETRACTABLE LANDING LIGHT
N786TW -ATA33-41-03-1	8906K1269:I81205	TAXI LIGHT SWITCH
N786TW -ATA33-42-01-1	30-1098-1:IPENDIENT	ANTICOLLISS STROBE LIGHT
N786TW -ATA33-42-01-2	30-1099-1A:IPENDIENT	ANTICOLLISS STROBE LIGHT
N786TW -ATA33-43-01-1	702496:IPENDIENT	STROBE LIGHT FWD
N786TW -ATA33-43-01-2	30-1133-1:IPENDIENT	WING LIGHT
N786TW -ATA33-43-01-3	GE16720-010-6:IPENDIENT	STROBE LIGHT-RH
N786TW -ATA33-43-01-4	GE16720-010-6:IPENDIENT	STROBE LIGHT RH WING
N786TW -ATA33-53-00-1	60-0304-51:I72914	BATTERY-POWER SUPPLY
N786TW -ATA33-53-00-1	60-0304-51:I72914	BATTERY-POWER SUPPLY
N786TW -ATA33-53-00-1	60-0304-51:I72914	BATTERY-POWER SUPPLY
N786TW -ATA33-53-00-1	60-0304-51:I72914	BATTERY-POWER SUPPLY
N786TW -ATA33-53-00-1	803900-1:I06509	BATTERY-POWER SUPPLY
N786TW -ATA33-53-00-1	60-1177-9:IPENDIENT	EMERGENCY BATTERY PACK POWER
N786TW -ATA33-53-00-1	60-0304-51:I72914	BATTERY-POWER SUPPLY
N786TW -ATA33-53-00-1	60-0304-51:I72914	BATTERY-POWER SUPPLY
N786TW -ATA33-53-00-2	10-0119-1:IM6345	EMERGENCY EXIT LIGHT
N786TW -ATA34-11-01-1	5920413-505:IM5563	PITOT STATIC PLATE
N786TW -ATA34-12-01-1	4005123-907:IM2446	ALTIMETER INDICATOR
N786TW -ATA34-12-01-2	4005123-907:IM2446	ALTIMETER INDICATOR
N786TW -ATA34-13-01-1	4057800-906:I40228	MACH AIRSPEED INDICATOR
N786TW -ATA34-13-01-2	4057800-906:I40228	MACH AIRSPEED INDICATOR
N786TW -ATA34-13-02-1	WL101AMS5:I35012	INDICATOR- STANDBY ALTIMETER & AIRSPEED
N786TW -ATA34-14-01-1	622-9353-223:IM1854	INDICATOR VSI
N786TW -ATA34-14-01-2	622-9353-221:I4V792	INDICATOR VSI
N786TW -ATA34-16-01-1	HG280D80:I94580	DIGITAL AIR DATA COMPUTER
N786TW -ATA34-16-01-2	HG280D80:I94580	DIGITAL AIR DATA COMPUTER

N786TW -ATA34-18-02-1	4058254-901:I11608	PANEL- THRUST RATING CONTROL
N786TW -ATA34-19-01-1	10000165-101:I98571	ANGLE OF ATTACK TRANSDUCER
N786TW -ATA34-19-01-2	10000165-101:I98571	ANGLE OF ATTACK TRANSDUCER
N786TW -ATA34-19-02-1	965-0449-002:I97896	STALL WARNING COMPUTER
N786TW -ATA34-19-02-2	965-0449-002:I97896	STALL WARNING COMPUTER
N786TW -ATA34-19-06-1	35A557:I21844	DC STALL WARNINGSKAKER
N786TW -ATA34-19-06-2	35A557:I21844	DC STALL WARNINGSKAKER
N786TW -ATA34-21-01-1	C4E:I61349	COMPASS-MAGNETIC PILOTS
N786TW -ATA34-21-06-1	2587794:I58960	VALVE FLUX
N786TW -ATA34-21-10-1	460800-03-06:ID4856	ALTITUDE HAEDING REFERENCE UNIT
N786TW -ATA34-21-10-2	460800-03-06:ID4856	ALTITUDE HAEDING REFERENCE UNIT
N786TW -ATA34-21-12-2	2594661-903:I58960	RADIO MAGNETIC INDICATOR
N786TW -ATA34-22-06-1	4056510-903:I58960	PRIMARY DISPLAY INDICATOR
N786TW -ATA34-22-06-2	4056510-903:I58960	PRIMARY DISPLAY INDICATOR
N786TW -ATA34-22-10-1	4055900-905:I58960	EFIS SYMBOL GENERATOR
N786TW -ATA34-22-10-2	4055900-906:I55939	EFIS SYMBOL GENERATOR
N786TW -ATA34-22-13-1	4056512-915:I64547	MODE SELECTOR PANEL
N786TW -ATA34-22-13-2	4056512-915:I64547	MODE SELECTOR PANEL
N786TW -ATA34-22-15-1	4056511-904:I58960	DIMMING PANEL
N786TW -ATA34-22-15-2	4056511-904:I58960	DIMMING PANEL
N786TW -ATA34-22-15-2	4056511-904:I58960	DIMMING PANEL
N786TW -ATA34-23-06-1	4056510-903:I58960	PRIMARY DISPLAY INDICATOR
N786TW -ATA34-23-06-2	4056510-903:I58960	PRIMARY DISPLAY INDICATOR
N786TW -ATA34-24-00-1	G-5850:I99837	PANEL-FD/CADC/VG CONTROL
N786TW -ATA34-28-01-1	705-15V1:IF9111	INDICATOR - STANDBY HORIZON
N786TW -ATA34-28-02-1	TSG420-102:IF9111	STATIC INVERTER- STANDBY
N786TW -ATA34-31-01-1	522-0854-003-BORRADO:IM1854	ANTENNA MARKER
N786TW -ATA34-32-01-1	522-0700-023:IM4734	ANTENNA- GLIDE SLOPE
N786TW -ATA34-32-02-1	2041234-3401:IM1048	VOR/ILS RECEIVER UNIT
N786TW -ATA34-32-02-2	2041234-3401:IM1048	VOR/ILS RECEIVER UNIT
N786TW -ATA34-32-03-1	4034240-906:I58960	PANEL- VHF NAV. CONTROL
N786TW -ATA34-32-03-2	4034240-906:I58960	PANEL- VHF NAV. CONTROL
N786TW -ATA34-41-01-1	2041444-0403:IM1048	WEATHER RADAR ANTENNA DRIVE
N786TW -ATA34-41-01-2	2041446-0401:IM1048	ANTENNA FLAT PLATE-WEATHER
N786TW -ATA34-41-03-1	2041223-0412:IM2432	WEATHER RADAR CONTROL PANEL
N786TW -ATA34-41-04-1	2041217-0416:IM1048	TRANSCEIVER-WEATHER RADAR
N786TW -ATA34-42-03-1	622-3890-014:I4V792	ALTIMETER - RADIO
N786TW -ATA34-42-03-2	622-3890-015:I90107	ALTIMETER - RADIO
N786TW -ATA34-45-02-1	5934644-501:I88277	SPEAKER
N786TW -ATA34-46-01-1	622-8971-022:I03972	TCAS R/T COMPUTER
N786TW -ATA34-46-02-1	622-8973-001-BO:I13499	ANTENNA
N786TW -ATA34-46-02-2	622-8973-001-BO:I13499	ANTENNA
N786TW -ATA34-47-01-1	4059845-911:IM4994	WIND SHEAR INDICATOR
N786TW -ATA34-47-01-1	4059845-911:IM4994	WIND SHEAR INDICATOR
N786TW -ATA34-51-01-2	5934425-75:I88277	ANTENNA
N786TW -ATA34-52-02-1	622-2921-001:I4V792	DME INTERROGATOR
N786TW -ATA34-52-02-2	622-2921-001:I4V792	DME INTERROGATOR
N786TW -ATA34-53-04-1	622-7080-001:I88277	ADF CONTROL PANEL
N786TW -ATA34-53-04-2	622-7080-001:I88277	ADF CONTROL PANEL
N786TW -ATA34-53-05-1	2041168-7510:I81205	ADF RECEIVER
N786TW -ATA34-53-05-2	2041168-7501:I06845	ADF RECEIVER
N786TW -ATA34-54-02-1	622-8974-210:I4V792	CONTROL PANEL ATC TRANSP
N786TW -ATA34-54-03-1	622-7878-201:I4V792	ATC TRANSPONDER
N786TW -ATA34-54-03-2	622-7878-201:I4V792	ATC TRANSPONDER
N786TW -ATA34-63-01-1	7892475-041:I16758	PERFORMANCE MANAGEMENT COMPUTER
N786TW -ATA34-63-02-1	7892551-011-010:I09691	COMPUTER- PERFORMANCE

N786TW -ATA34-63-02-1	100-601900-202:100030	CMA-900 FMU
N786TW -ATA35-10-01-1	801307-21:IPENDIENT	OXYGEN CYLINDER - CREW
N786TW -ATA35-10-01-2	27660-05:I53655	CREW OXIGEN REGULATOR VALVE
N786TW -ATA35-10-02-1	29261-7EA1:IV99251	REGULATOR
N786TW -ATA35-10-02-2	29261-7EA1:IV99251	REGULATOR
N786TW -ATA35-10-02-3	29261-7EA1:IV99251	REGULATOR
N786TW -ATA35-10-03-1	358-1430V-1:IPENDIENT	OXIGEN MASK
N786TW -ATA35-10-03-2	358-1432V-1:I53655	OXIGEN MASK
N786TW -ATA35-10-03-3	358-1432V-1:I53655	OXIGEN MASK
N786TW -ATA35-20-0001	801386-83:I53655	OXYGEN GENERATOR - LH SEATS
N786TW -ATA35-20-0002	801386-83:I53655	OXYGEN GENERATOR - LH SEATS
N786TW -ATA35-20-0003	801386-83:I53655	OXYGEN GENERATOR - LH SEATS
N786TW -ATA35-20-0007	801386-83:I53655	OXYGEN GENERATOR - LH SEATS
N786TW -ATA35-20-0008	801386-83:I53655	OXYGEN GENERATOR - LH SEATS
N786TW -ATA35-20-0009	801386-83:I53655	OXYGEN GENERATOR - LH SEATS
N786TW -ATA35-20-0010	801386-83:I53655	OXYGEN GENERATOR - LH SEATS
N786TW -ATA35-20-0011	801386-83:I53655	OXYGEN GENERATOR - LH SEATS
N786TW -ATA35-20-0012	801386-83:I53655	OXYGEN GENERATOR - LH SEATS
N786TW -ATA35-20-0014	801386-83:I53655	OXYGEN GENERATOR - LH SEATS
N786TW -ATA35-20-0015	801386-83:I53655	OXYGEN GENERATOR - LH SEATS
N786TW -ATA35-20-0016	801386-83:I53655	OXYGEN GENERATOR - LH SEATS
N786TW -ATA35-20-0017	801386-83:I53655	OXYGEN GENERATOR - LH SEATS
N786TW -ATA35-20-0018	801386-83:I53655	OXYGEN GENERATOR - LH SEATS
N786TW -ATA35-20-0019	801386-83:I53655	OXYGEN GENERATOR - LH SEATS
N786TW -ATA35-20-0020	801386-83:I53655	OXYGEN GENERATOR - LH SEATS
N786TW -ATA35-20-0021	801386-83:I53655	OXYGEN GENERATOR - LH SEATS
N786TW -ATA35-20-0022	801386-83:I53655	OXYGEN GENERATOR - LH SEATS
N786TW -ATA35-20-0023	801386-83:I53655	OXYGEN GENERATOR - LH SEATS
N786TW -ATA35-20-0024	801386-83:I53655	OXYGEN GENERATOR - LH SEATS
N786TW -ATA35-20-0025	801386-83:I53655	OXYGEN GENERATOR - LH SEATS
N786TW -ATA35-20-0026	801386-83:I53655	OXYGEN GENERATOR - LH SEATS
N786TW -ATA35-20-0027	801386-83:I53655	OXYGEN GENERATOR - LH SEATS
N786TW -ATA35-20-0028	801386-83:I53655	OXYGEN GENERATOR - LH SEATS
N786TW -ATA35-20-0029	801386-83:I53655	OXYGEN GENERATOR - LH SEATS
N786TW -ATA35-20-0035	801386-83:I53655	OXYGEN GENERATOR - LH SEATS
N786TW -ATA35-20-0036	801386-83:I53655	OXYGEN GENERATOR - LH SEATS
N786TW -ATA35-20-0051	801386-84:I53655	OXYGEN GENERATOR - RH SEATS
N786TW -ATA35-20-0052	801386-84:I53655	OXYGEN GENERATOR - RH SEATS
N786TW -ATA35-20-0053	801386-84:I53655	OXYGEN GENERATOR - RH SEATS
N786TW -ATA35-20-0057	801386-84:I53655	OXYGEN GENERATOR - RH SEATS
N786TW -ATA35-20-0058	801386-84:I53655	OXYGEN GENERATOR - RH SEATS
N786TW -ATA35-20-0059	801386-84:I53655	OXYGEN GENERATOR - RH SEATS
N786TW -ATA35-20-0060	801386-84:I53655	OXYGEN GENERATOR - RH SEATS
N786TW -ATA35-20-0061	801386-84:I53655	OXYGEN GENERATOR - RH SEATS
N786TW -ATA35-20-0062	801386-84:I53655	OXYGEN GENERATOR - RH SEATS
N786TW -ATA35-20-0064	801386-84:I53655	OXYGEN GENERATOR - RH SEATS
N786TW -ATA35-20-0065	801386-84:I53655	OXYGEN GENERATOR - RH SEATS
N786TW -ATA35-20-0066	801386-84:I53655	OXYGEN GENERATOR - RH SEATS
N786TW -ATA35-20-0067	801386-84:I53655	OXYGEN GENERATOR - RH SEATS
N786TW -ATA35-20-0068	801386-84:I53655	OXYGEN GENERATOR - RH SEATS
N786TW -ATA35-20-0069	801386-84:I53655	OXYGEN GENERATOR - RH SEATS
N786TW -ATA35-20-0070	801386-84:I53655	OXYGEN GENERATOR - RH SEATS
N786TW -ATA35-20-0071	801386-84:I53655	OXYGEN GENERATOR - RH SEATS
N786TW -ATA35-20-0072	801386-84:I53655	OXYGEN GENERATOR - RH SEATS
N786TW -ATA35-20-0073	801386-84:I53655	OXYGEN GENERATOR - RH SEATS
N786TW -ATA35-20-0074	801386-84:I53655	OXYGEN GENERATOR - RH SEATS

N786TW -ATA35-20-0075	801386-84:I53655	OXYGEN GENERATOR - RH SEATS
N786TW -ATA35-20-0076	801386-84:I53655	OXYGEN GENERATOR - RH SEATS
N786TW -ATA35-20-0077	801386-84:I53655	OXYGEN GENERATOR - RH SEATS
N786TW -ATA35-20-0078	801386-84:I53655	OXYGEN GENERATOR - RH SEATS
N786TW -ATA35-20-0079	801386-84:I53655	OXYGEN GENERATOR - RH SEATS
N786TW -ATA35-20-0080	801386-84:I53655	OXYGEN GENERATOR - RH SEATS
N786TW -ATA35-20-0081	801386-84:I53655	OXYGEN GENERATOR - RH SEATS
N786TW -ATA35-20-0082	801386-84:I53655	OXYGEN GENERATOR - RH SEATS
N786TW -ATA35-20-0083	801386-84:I53655	OXYGEN GENERATOR - RH SEATS
N786TW -ATA35-20-0084	801386-84:I53655	OXYGEN GENERATOR - RH SEATS
N786TW -ATA35-20-0085	801386-84:I53655	OXYGEN GENERATOR - RH SEATS
N786TW -ATA35-20-0086	801386-84:I53655	OXYGEN GENERATOR - RH SEATS
N786TW -ATA35-20-00F0	801386-82:I53655	OXYGEN GENERATOR - FWD ENTRY AREA
N786TW -ATA35-20-00F1	801386-82:I53655	OXYGEN GENERATOR - AFT ENTRY AREA
N786TW -ATA35-20-00F2	801386-83:I53655	OXYGEN GENERATOR - AFT SERVICE DOOR
N786TW -ATA35-30-02-1	5500A1ABF20B:I45402	PORTABLE OXYGEN CYLINDER
N786TW -ATA35-30-02-2	5500A1ABF23-A:I53655	PORTABLE OXYGEN CYLINDER
N786TW -ATA35-30-02-3	5500A1ABF23A:I53655	PORTABLE OXYGEN CYLINDER
N786TW -ATA35-30-02-4	5500A1ABF23A:I53655	PORTABLE OXYGEN CYLINDER
N786TW -ATA35-30-2	5600-1C1A-F23A:I53655	PORTABLE OXYGEN CYLINDER
N786TW -ATA36-10-01-1	392710-1-2:I59364	SHUT OFF - MODULATING VALVE
N786TW -ATA36-10-01-2	392710-1-2:I59364	VALVE MODULATING
N786TW -ATA36-10-02-1	3214176-1-1:I59364	PRESSURE DIFFERENTIAL REGULATOR VALVE
N786TW -ATA36-10-02-2	3214176-1-1:I59364	PRESSURE DIFFERENTIAL REGULATOR VALVE
N786TW -ATA36-10-04-1	123562-2-1:I59364	8TH STAGE BLEED AIR CHECK VALVE
N786TW -ATA36-10-06-1	129112-1-1:I59364	ANTICIPATOR
N786TW -ATA36-10-06-1	129112-1-1:I59364	ANTICIPATOR
N786TW -ATA36-10-07-1	129110-2-1:I59364	PNEUMATIC THERMOSTAT
N786TW -ATA36-10-07-2	129110-2-1:I59364	PNEUMATIC THERMOSTAT
N786TW -ATA36-20-01-1	ST506A:I4A887	PNEUMATIC PRESSURE TRANSMITTER
N786TW -ATA36-20-01-2	SRL92P:IPENDIENT	ENGINE PNEUMATIC PRESS INDICATOR
N786TW -ATA38-11-01-1	P183-395-1:I91816	VALVE - DRAIN
N786TW -ATA38-11-04-1	P141-395-5:I91816	VALVE-SELECTOR
N786TW -ATA38-30-02-1	11218-001:IV29780	VALVE ASSEMBLY DRAIN
N786TW -ATA38-30-02-2	11206-001:I07GX3	DRAIN VALVE RH & LH AFT
N786TW -ATA38-30-03-1	11204-005:I92824	PUMP
N786TW -ATA38-30-03-1	11204-005:I92824	PUMP
N786TW -ATA38-30-03-1	11204-007:IPENDIENT	PUMP
N786TW -ATA38-30-03-2	3205-22:I29780	MOTOR AC
N786TW -ATA38-30-03-2	3205-22:I29780	MOTOR AC
N786TW -ATA38-30-03-2	3205-22:I29780	MOTOR AC
N786TW -ATA49-10-00	109382-32-1:IU1841	APU BUTTERFLY VALVE
N786TW -ATA49-10-00	3602310-33:IV99193	FUEL CONTROL - APU
N786TW -ATA49-10-00	381276-1:I97896	APU - AUXILIARY POWER UNIT
N786TW -ATA49-10-00	2S2124:I99240	VALVE CHECK-APU
N786TW -ATA49-10-00	3605812-17:IM6489	STARTER APU
N786TW -ATA49-10-00	129552-1-1:I99193	PNEUMATIC THERMOSTAT APU
N786TW -ATA49-10-00	124536-19-1:I27914	FUEL CONTROL UNIT APU
N786TW -ATA49-10-00	3604524-44:IM6489	FUEL COMBUSTION CHAMBER
N786TW -ATA49-10-00	108032-8:I64547	REGULATOR AIR PRESSURE
N786TW -ATA49-10-00	3601193-2:I7X000	ATOMIZER
N786TW -ATA49-10-00	2CM9ABH7:I13545	GENERATOR TACHOMETER
N786TW -ATA49-10-00	1051T100-23:I98889	ROTARY ACTUATOR
N786TW -ATA49-10-00	3609480-13:IM6489	SWITCH - CENTRIFICAL APU
N786TW -ATA49-10-00	976J252-8:I99167	GENERATOR - AC
N786TW -ATA49-20-01-1	3605384-3:IM3176	LINER ASSEMBLY COMBUSTION

N786TW -ATA49-31-01-1	155665-2-2:IM6489	VALVE CONTROL FLUID
N786TW -ATA49-50-10-1	320362-2-1:IV59364	SOLENOID VALVE APU
N786TW -ATA49-71-01-1	124-514-1:I34830	APU EXHAUST TEMPERATUR INDICATOR
N786TW -ATA49-72-02-1	8DJ81LWT4:I97424	APU TACHOMETER INDICATOR (RPM)
N786TW -ATA49-90-07-1	373048-3:I99193	VALVE
N786TW -ATA52-60-00-1	5915901-557AS:IPENDIENT	STAIRWAY ASSEMBLY
N786TW -ATA52-61-01-1	1027T100-17:I98889	ACTUATOR - PAX STAIR
N786TW -ATA52-61-02-1	1068T100-6M:I98889	ACTUATOR ASSEMBLY STAIRWAY
N786TW -ATA52-63-01-1	5917267-5507:I81205	VALVE
N786TW -ATA52-63-02-1	5961892-5001:I88277	CYLINDER ASSEMBLY VENTRAL STAIR
N786TW -ATA53-51-01-1	5910091-27:I88277	RADOME ASSEMBLY
N786TW -ATA56-10-03-1	5613217-519:IM6076	WINDOW ASSEMBLY PILOTS
N786TW -ATA56-10-03-2	5613217-520:IM5563	WINDOW ASSEMBLY PILOTS
N786TW -ATA56-10-03-2	38E63-12C:I31645	DISTRIBUTOR VALVE
N786TW -ATA56-10-04-1	5912415-1:I81205	PANEL ASSEMBLY - UPPER
N786TW -ATA56-10-04-2	5912415-2:I81205	PANEL ASSEMBLY - UPPER
N786TW -ATA57-20-02-1	5910472-179:IPENDIENT	TIP ASSEMBLY
N786TW -ATA57-20-03-1	5919572-512:I81205	DOOR
N786TW -ATA71-20-01-1	K2219-9SA3:I13636	BOLT
N786TW -ATA71-20-01-2	K2219-9SA3:I13636	BOLT
N786TW -ATA71-20-01-3	K2219-9SA3:I13636	FORWARD CONE BOLT
N786TW -ATA71-20-01-4	K2219-9SA3:I13636	FORWARD CONE BOLT
N786TW -ATA71-20-01-5	K2219-9SA9:I13636	AFT CONE BOLT
N786TW -ATA71-20-01-6	K2219-9SA9:I13636	AFT CONE BOLT
N786TW -ATA71-20-02-1	K2219-9SA31:I13636	VIBRATION ISOLATOR
N786TW -ATA71-20-02-2	K2219-9SA31:I13636	VIBRATION ISOLATOR
N786TW -ATA71-20-02-3	K2219-9SA31:I13636	VIBRATION ISOLATOR
N786TW -ATA71-20-02-4	K2219-9SA31:I13636	VIBRATION ISOLATOR
N786TW -ATA71-20-02-5	K2219-9SA32:I13636	AFT VIBRATION ISOLATOR
N786TW -ATA71-20-02-6	K2219-9SA32:I13636	AFT VIBRATION ISOLATOR
N786TW -ATA72-00-00L	696233B:I99167	CSD - CONSTANT SPEED DRIVE
N786TW -ATA72-00-00L	976J252-8:I99167	GENERATOR 40 KVA
N786TW -ATA72-00-00L	RR12551A:I51663	PUMP - ENGINE STARTING FUEL
N786TW -ATA72-00-00L	3029981-001:I62983	PUMP- HYDRAULIC
N786TW -ATA72-00-00L	123562-2-1:I59364	CHECK VALVE
N786TW -ATA72-00-00L	5930645-505:IPENDIENT	COWLING ASSEMBLY- ENGINE NOSE
N786TW -ATA72-00-00L	800115:IPENDIENT	C01.5
N786TW -ATA72-00-00L	821501:I77445	C01
N786TW -ATA72-00-00L	772402:IPENDIENT	C02
N786TW -ATA72-00-00L	772803:IPENDIENT	C03
N786TW -ATA72-00-00L	777704:IPENDIENT	C04
N786TW -ATA72-00-00L	802105:IPENDIENT	C05
N786TW -ATA72-00-00L	772806:IPENDIENT	C06
N786TW -ATA72-00-00L	822107:IPENDIENT	C07
N786TW -ATA72-00-00L	821938:IPENDIENT	C08
N786TW -ATA72-00-00L	822209:IPENDIENT	C09
N786TW -ATA72-00-00L	822010:IPENDIENT	C10
N786TW -ATA72-00-00L	815711-002:IPENDIENT	C11
N786TW -ATA72-00-00L	815712-002:IPENDIENT	C12
N786TW -ATA72-00-00L	5005613-01:IPENDIENT	C13
N786TW -ATA72-00-00L	5000947-01:IPENDIENT	HTS
N786TW -ATA72-00-00L	856601:IPENDIENT	T01
N786TW -ATA72-00-00L	820514-001:IPENDIENT	LTS
N786TW -ATA72-00-00L	777603:IPENDIENT	T03
N786TW -ATA72-00-00L	778702:IPENDIENT	T02
N786TW -ATA72-00-00L	800804:IPENDIENT	T04

N786TW -ATA72-00-00L	JT8D219:I77445	ENGINE
N786TW -ATA72-00-00L	805373:I77445	PRBC
N786TW -ATA72-00-00L	743496-8:I66917	VALVE SOLENOID
N786TW -ATA72-00-00L	766342:I77445	VALVE FUEL PRESS
N786TW -ATA72-00-00L	392550-4:I59364	REGULATOR AIR FLOW
N786TW -ATA72-00-00L	790312-001:I77445	PRESS RATIO BLEED CONTROL
N786TW -ATA72-00-00L	5938050-507:I00130	THRUST REVERSER ASSEMBLY
N786TW -ATA72-00-00L	7958522-501:I09049	SENSOR ELECTRIC 1 AMP 28 VDC
N786TW -ATA72-00-00L	392796-5:I06848	VALVE STARTER SHUT-OFF
N786TW -ATA72-00-00L	320115:I79318	VALVE AND ACTUATOR-AIR
N786TW -ATA72-00-00L	384301:IPENDIENT	FUEL PUMP
N786TW -ATA72-00-00L	2CM9ABH7:I13545	GENERATOR TACHOMETER
N786TW -ATA72-00-00L	2CM9ABH7:I13545	GENERATOR TACHOMETER
N786TW -ATA72-00-00L	801407:I77445	FAN INLET CASE
N786TW -ATA72-00-00L	SR09320057-7005:I88277	HYDRAULIC DAMPER - MLG
N786TW -ATA72-00-00L	8TJ85GCG2:I97424	TRANSMITTER FUEL FLOW
N786TW -ATA72-00-00L	5930646-503:I88277	NOSE DOME
N786TW -ATA72-00-00L	801407:I77445	FAN INLET CASE
N786TW -ATA72-00-00L	42D109-1A:I09049	SWITCH PRESSURE DIFFERENTIAL
N786TW -ATA72-00-00L	123562-4-1:I27914	CHECK VALVE
N786TW -ATA72-00-00L	B18D18:IV72914	CSD OIL COOLER
N786TW -ATA72-00-00L	5938060-505:IM5563	LOCKING MECHANISM - REVERSIBLE
N786TW -ATA72-00-00L	5938060-501:IPENDIENT	DOOR ASSEMBLY
N786TW -ATA72-00-00L	9045000-1:I59501	IGNITION EXCITER
N786TW -ATA72-00-00L	8TJ146AAP1:I4A887	TRANSMITTER - ENGINE OIL QTY
N786TW -ATA72-00-00L	320115:I79318	VALVE AND ACTUATOR-AIR
N786TW -ATA72-00-00L	769606-15:I73030	FUEL CONTROL - ENGINE
N786TW -ATA72-00-00L	V3400-283:I81205	SOLENOID
N786TW -ATA72-00-00L	383342-14:IM6183	STARTER - AIR TURBINE
N786TW -ATA72-00-00L	5000047-01:I77445	BLEED CONTROL VALVE
N786TW -ATA72-00-00L	320115:I79318	VALVE AND ACTUATOR-AIR SHUTOFF
N786TW -ATA72-00-00L	49988:I83311	IGNITION EXCITER
N786TW -ATA72-00-00R	976J252-6:I99167	AC GENERATOR 40 KVA
N786TW -ATA72-00-00R	123562-4-1:I27914	8TH STAGE BLEED AIR CHECK VALVE
N786TW -ATA72-00-00R	822107:IPENDIENT	C07
N786TW -ATA72-00-00R	JT8D219:I77445	ENGINE
N786TW -ATA72-00-00R	805373:I77445	PRBC
N786TW -ATA72-00-00R	766342:I77445	VALVE - FUEL PRESS P&D
N786TW -ATA72-00-00R	5000047-01:I77445	BLEED CONTROL VALVE
N786TW -ATA72-00-00R	320115:I79318	VALVE AND ACTUATOR-AIR
N786TW -ATA72-00-00R	320115:I79318	VALVE AND ACTUATOR-AIR
N786TW -ATA72-00-00R	58120:I88277	THRUST REVERSER ACTUATOR
N786TW -ATA72-00-00R	58120:I88277	THRUST REVERSER ACTUATOR
N786TW -ATA72-00-00R	5938050-503:I00130	THRUST REVERSER ASSEMBLY
N786TW -ATA72-00-00R	7958522-501:I09049	SENSOR ELECTRIC 1 AMP 28 VDC
N786TW -ATA72-00-00R	11-10579:IPENDIENT	PNEUMATIC FILTER
N786TW -ATA72-00-00R	383342-14:IM6183	STARTER - AIR TURBINE
N786TW -ATA72-00-00R	392796-5:I06848	VALVE STARTER SHUT-OFF
N786TW -ATA72-00-00R	384300:IM6049	FUEL PUMP
N786TW -ATA72-00-00R	2CM9ABH7:I13545	GENERATOR TACHOMETER
N786TW -ATA72-00-00R	B18D18:IV72914	CSD OIL COOLER
N786TW -ATA72-00-00R	7958522-507:I09049	DIFFERENTIAL PRESS SWITCH
N786TW -ATA72-00-00R	2CM9ABH7:I13545	GENERATOR TACHOMETER
N786TW -ATA72-00-00R	B18D18:IV72914	CSD OIL COOLER
N786TW -ATA72-00-00R	743496-8:I66917	VALVE SOLENOID
N786TW -ATA72-00-00R	769606-15:I73030	FUEL CONTROL - ENGINE

N786TW -ATA72-00-00R	8TJ85GCG2:I97424	TRANSMITTER. FUEL FLOW
N786TW -ATA72-00-00R	5938060-505:IM5563	DOOR ASSEMBLY THRUST REVERSER LOWER
N786TW -ATA72-00-00R	696233B:I99167	CSD - CONSTANT SPEED DRIVE
N786TW -ATA72-00-00R	5930645-509:I81205	COWLING ASSEMBLY- ENGINE NOSE
N786TW -ATA72-00-00R	800015:IPENDIENT	C01.5
N786TW -ATA72-00-00R	5000501-01:I77445	C01
N786TW -ATA72-00-00R	772402:IPENDIENT	C02
N786TW -ATA72-00-00R	772803:IPENDIENT	C03
N786TW -ATA72-00-00R	777704:IPENDIENT	C04
N786TW -ATA72-00-00R	802105:IPENDIENT	C05
N786TW -ATA72-00-00R	772806:IPENDIENT	C06
N786TW -ATA72-00-00R	797938-002:IPENDIENT	C08
N786TW -ATA72-00-00R	798509-001:IPENDIENT	C09
N786TW -ATA72-00-00R	772510-001:IPENDIENT	C10
N786TW -ATA72-00-00R	772511-001:IPENDIENT	C11
N786TW -ATA72-00-00R	798512-001:IPENDIENT	C12
N786TW -ATA72-00-00R	5005613-01:IPENDIENT	C13
N786TW -ATA72-00-00R	5000947-01:IPENDIENT	HTS
N786TW -ATA72-00-00R	855701:IPENDIENT	T01
N786TW -ATA72-00-00R	820514-001:IPENDIENT	LTS
N786TW -ATA72-00-00R	777603:IPENDIENT	T03
N786TW -ATA72-00-00R	778702:IPENDIENT	T02
N786TW -ATA72-00-00R	320115:I79318	VALVE AND ACTUATOR - AIR SHUTOFF
N786TW -ATA72-00-00R	800804:IPENDIENT	T04
N786TW -ATA72-00-00R	RR12551A:I51663	PUMP - FUEL
N786TW -ATA73-20-05-1	V3400-283:I81205	VALVE SOLENOID
N786TW -ATA73-31-02-1	8TJ88GAN4:I4A887	FUEL FLOW POWER SUPPLY
N786TW -ATA73-31-02-2	8TJ88GAN4:I4A887	FUEL FLOW POWER SUPPLY
N786TW -ATA76-11-02-1	213779:I66503	CONTROL BOX - ENGINE SYNC
N786TW -ATA76-11-02-1	5485-064:I66503	SYNCHRONIZER ACTUATOR
N786TW -ATA77-11-02-1	LG80E1:IV97896	EPR TRANSMITTER
N786TW -ATA77-11-02-1	LG80E1:IV97896	EPR TRANSMITTER
N786TW -ATA77-11-02-2	LG80E1:IV97896	EPR TRANSMITTER
N786TW -ATA78-31-04-1	41000740-104:I98391	HYDRAULIC CONTROL VALVE
N786TW -ATA78-31-04-1	41000740-104:I98391	VALVE - HYDRAULIC CHECK